



# HAYWARD®



## Quick Reference Guide

### Max Flo VS™

For SP2302VSPND, go to "Set Pump Address"













Total HP 1.50 / 230V  
Single Phase 60Hz







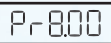





### Default Timers

- V1: 1500 rpm / 12:00PM - 8:00AM
- V2: 2400 rpm / 8:00AM - 12:00PM
- V3: 3000 rpm / Timer Deactivated

### Configuration Menu

- Push and hold  until you see  on display  
release button,  will display
- Adjust   time of day, then  to show next screen

- Prime countdown  will display (minutes . seconds)
  - Adjust   countdown, then  to show next screen
- Note: prime timer can be adjusted up to 9.30 & down to 0.00 (disabled)

- V1 timer speed  will display
  - Adjust   V1 speed, then  to show next screen
- Note: Timer speed range 600-3000 rpm
- V1 start time  will display
  - Adjust   V1 speed, then  to show next screen
  - V1 stop time  will display
  - Adjust   V1 speed, then  to show next screen

Blue light blinking



Repeat this section for V2 and V3 to complete configuration  
Note: Turn Timer off by setting start and stop time the same.

# Quick Reference Guide - Interface

## Character Key

-r23- pump revision	CONF9 configuration menu
Pr8.00 prime duration/remaining (minutes . seconds)	tEST test/service mode
P 1800 power consumption (Watts)	STOP pump interrupt run/stop
3000 pump speed (RPM)	rESEt reset to factory default


## Service Mode

- With pump off, push and hold and turn on pump  
release button, when displays
- Adjust pump speed
- To cancel Service Mode power cycle pump

## Temporary Speed Change

- Push or to activate
- Adjust temporary pump speed

Note: Selected button will run until next scheduled timer or 12 hrs (which ever comes first)

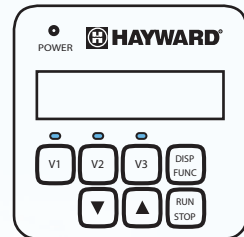

## Set Pump Address \*VSPND Model ONLY\*

- Push and hold until you see on display  
release button, will display
- Adjust to set pump address, then until end of config.

Note: Consult controller manual to determine which address should be used

To take a closer look or see other Hayward products please go to:

[www.hayward.com](http://www.hayward.com) or call 1-800-432-8387



QRG-2302VSP (Rev. B)